


NOTES:

1. ————— MURPHY HOOK-UP BOTH ENDS.
2. - - - - - CUSTOMER HOOK-UP BOTH ENDS.
3. ALTERNATE METHODS OF ENGINE SHUTDOWN (FOR DIESEL AND SPARK IGNITION ENGINE) ARE SHOWN. SELECT APPROPRIATE CIRCUIT AND WIRE ACCORDINGLY.

4. IGNITION RESISTOR OR RESISTOR IGNITION MUST BE BETWEEN C TERMINAL ON MAGNETIC SWITCH AND IGNITION COIL.

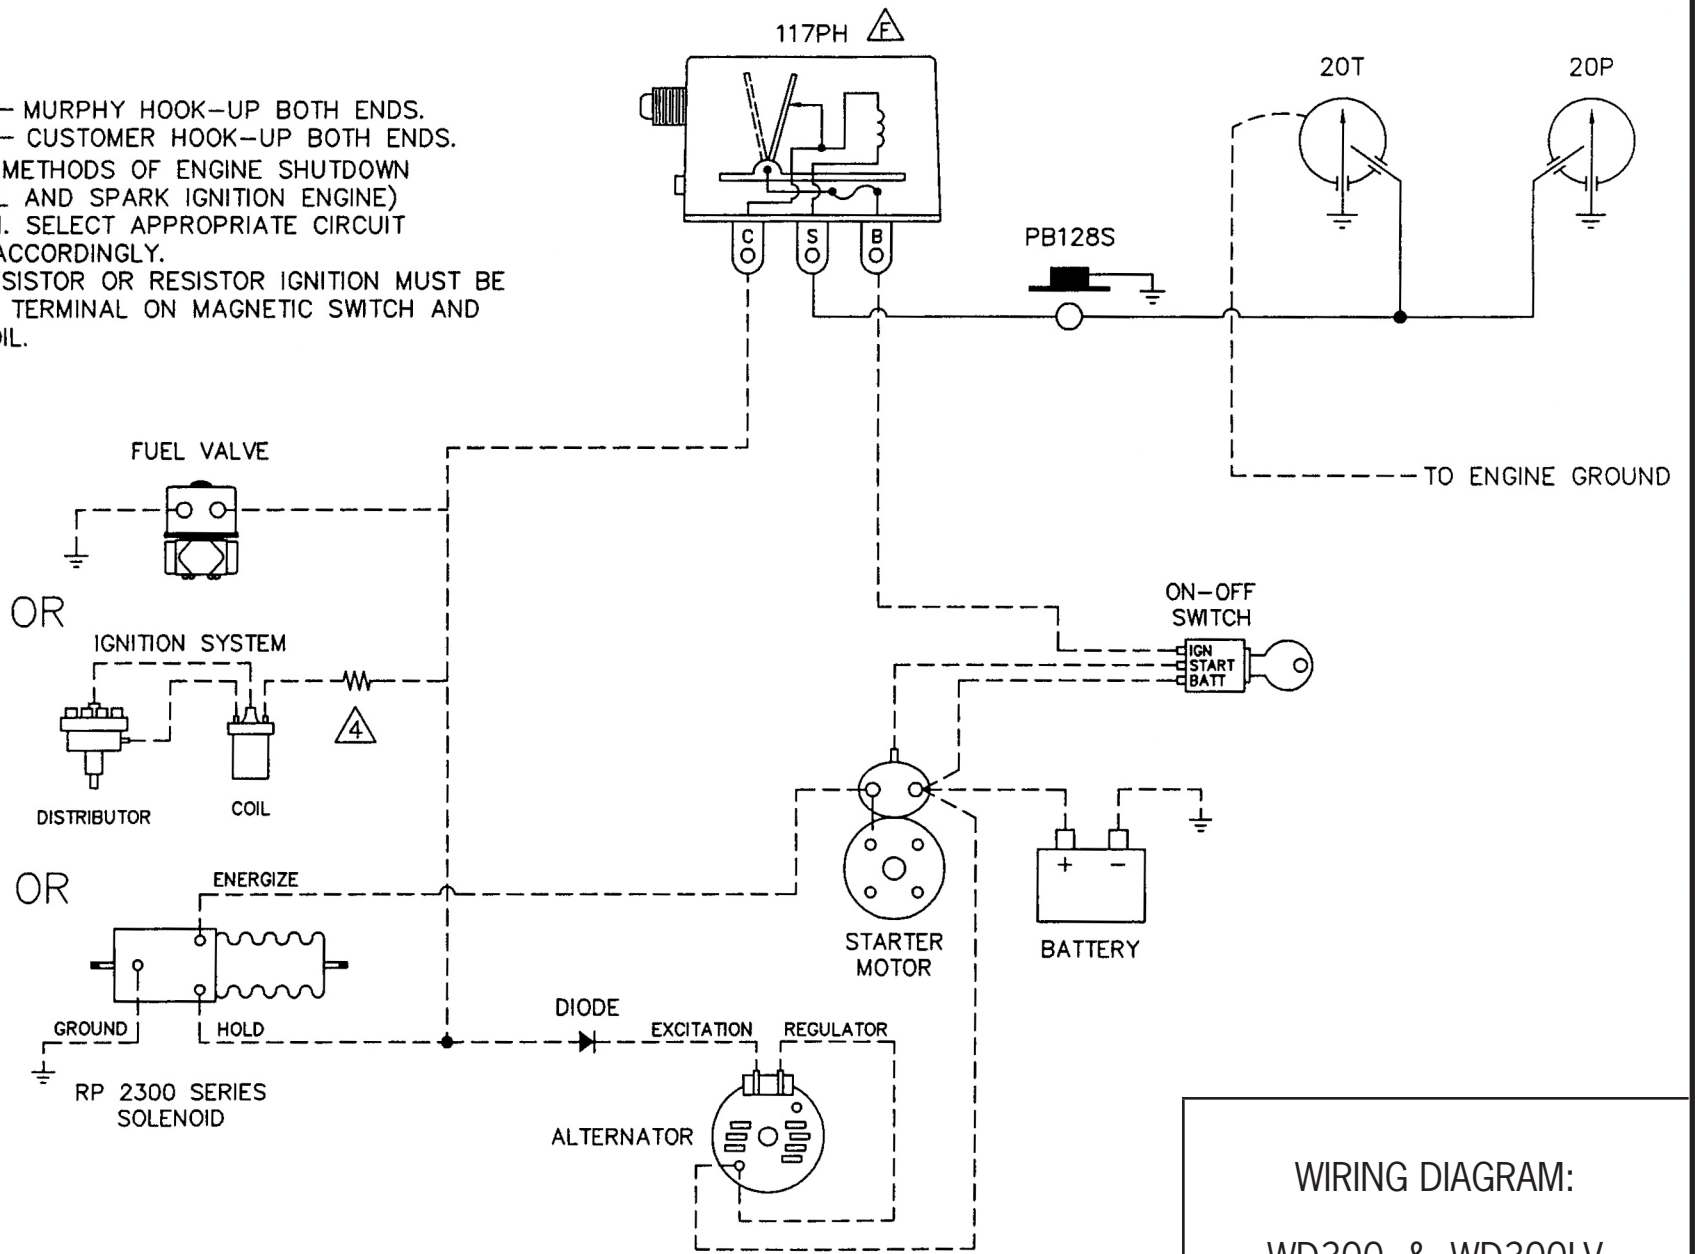

WIRING DIAGRAM:
WD300 & WD300LV